Document Objective: To provide basic connector location information only, including in-lines and grounds.
For detailed connector information refer to the Electrical Reference Library (ERL).

All paper copies are uncontrolled.

Note: For improved clarity some harnesses have been omitted completely e.g. engines, seats, bumpers, steering, climate control and some link leads

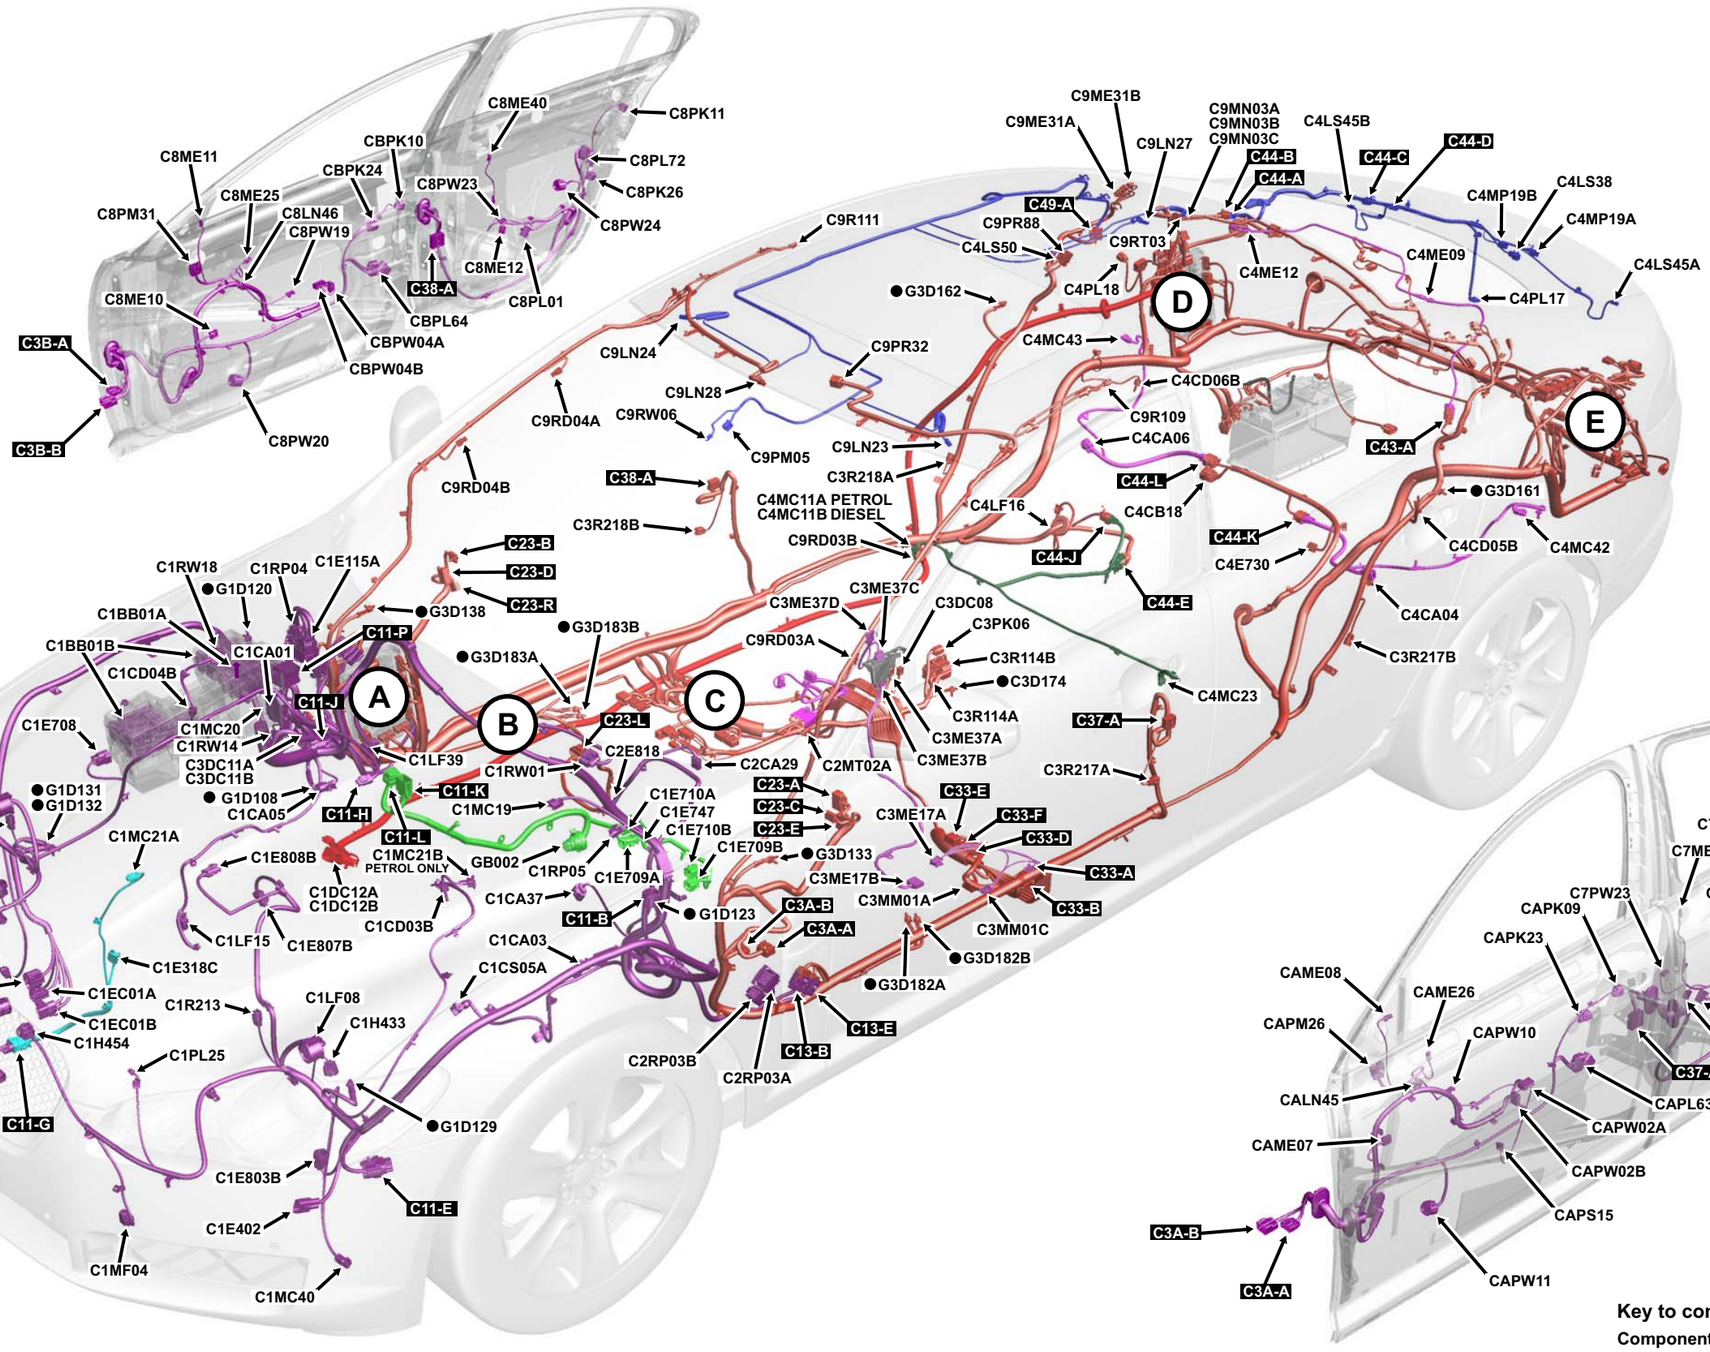

Key to connectors

Components - black text, e.g. **C4LS45A**
Inlines - white text, e.g. **C11-F**
Grounds - black text preceded by a dot , e.g. ● **G2D114**

Version: 2, 1st February 2008

All paper copies are uncontrolled.

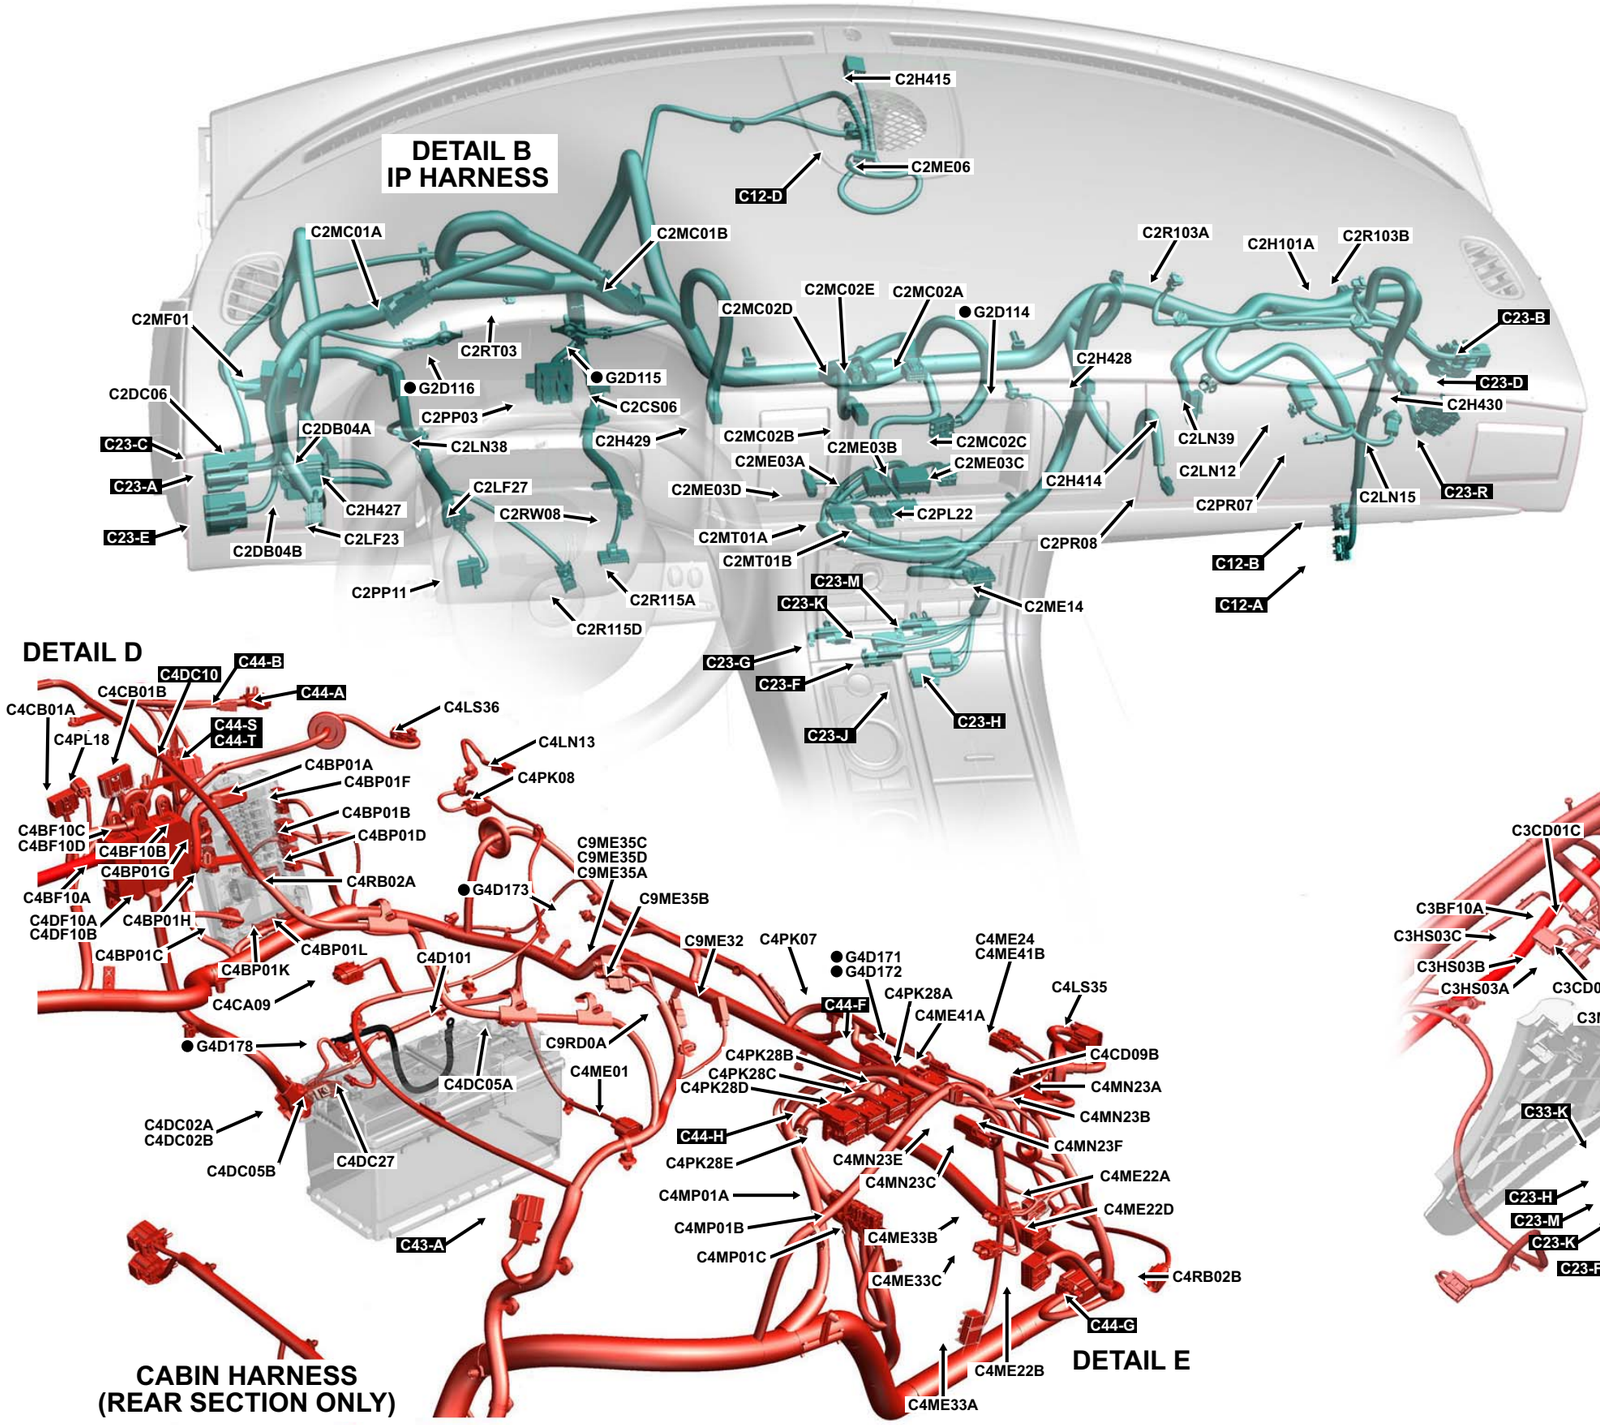

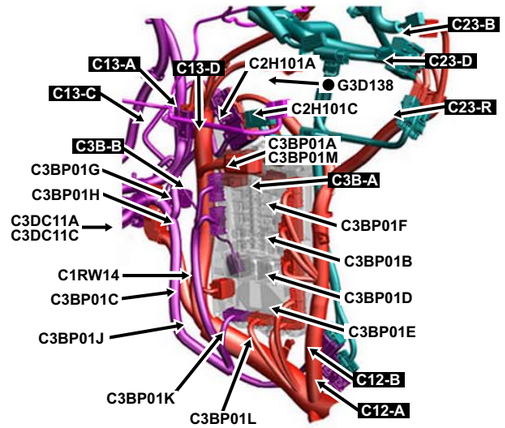

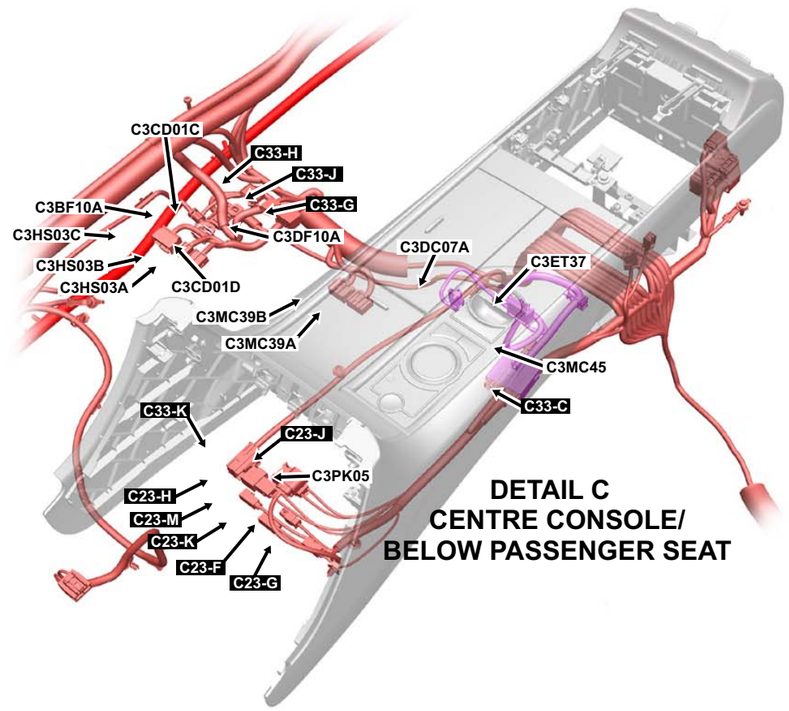

Version: 2, 1st February 2008